

**SMD 2.0
STEP MOTION DRIVE SYSTEM**

**TST 2.0
STEP MOTOR POWER FEED**

**DSD 2.0
DIGITAL SERVO SYSTEM**

OPERATION AND INSTALLATION MANUAL

SECTION 1: SMD DRIVER CASE

SECTION 2: MS DRIVER CARD

FOR QUICK REFERENCE - REFER TO THE APPENDIX SECTIONS

THE MOTION GROUP SERVICE CENTER
800-424-STEP
PO BOX 4585 MOUNTAIN VIEW, CA 94040 TEL: 650-969-5829 FAX: 650-968-6192

!!!! ATTENTION !!!!

Mis-wiring of motor or power supplies **WILL** damage motor drivers **IMMEDIATELY**. Motor coils A or B can be reversed; motor will run in the opposite direction. Pairs can be reversed; pair A in coil B for example. **CROSS-WIRING**, an A and B wire crossed, **WILL** damage driver. Allowing exposed motor leads to touch each other, ground, or power **MAY** damage driver. Refer to Appendix D in the MS driver section for wiring schemes.

SMOKE, POPPING, ELECTRONIC ODOR, OR FUSE FAILURE INDICATES DRIVER FAILURE.

Call the Service Center. Do **NOT** change fuse or attempt repair without instructions. **ADDITIONAL DAMAGE CAN OCCUR !!!** Shorted drivers can easily be repaired by replacing the socketed driver arrays.


!!!! WARNING !!!!

NEVER connect or disconnect any of the motor leads or power supply (VMM) leads before disconnecting AC power! Unit may be safely operated **WITHOUT** motor. However, pause 30 seconds after power off before reconnecting motor (Bleed-Down time).

!!!! ATTENTION !!!!


When connecting the SMD to a control device the +5 VCC logic power **MUST BE IN COMMON** between the two units to prevent ground loops or other noise problems. A diode is used to isolate and prevent "back powering" of the control unit by the SMD. Refer to the wiring diagram.

CONTROLLER TO SMD ISOLATION WIRING DIAGRAM

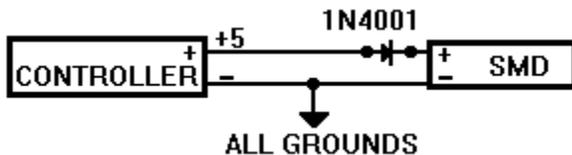

SMD

SECTION 1: SMD - Stepper motor drive assembly

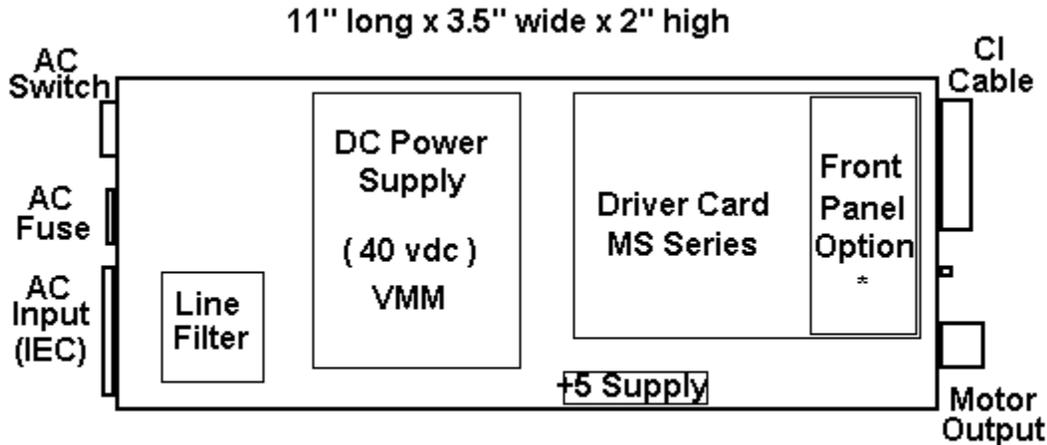

This chassis system supports three configurations:

The SMD system is used with an external controller, indexer, or other device in positioning applications. The CI cable supports a Home Sensor, Limit-Loop, Spare Signals, and controller input signals.

The TST system includes the on-board oscillator and the external controls; Speed Dial, Run-Stop and Direction Switch. It is used in stand-alone, stop / start applications. The CI connector supports a remote control panel. Speed accuracy is +/- 1 % ; 0.01 % is optional. Automatic proportional ramping is also available.

The DSD system includes a Dial-Pot encoder interface which allows the accurate positioning of a motor by rotating a dial. The CI connector supports the encoder and, if required, an optional counter/display module.

GENERAL DESCRIPTION. All configurations of the SMD modules are a rectangular, aluminum-cased unit combining a high-speed, high-power step motor driver with a matched power supply. The driver is an adjustable current, chopper style, with 2 amps per phase maximum. The power supply is 40 vdc. This system will operate step motors with coil currents from .1 to 2 amps; 4, 5, 6, or 8 wire. Larger motors up to 5 amps can also be used, however, coils must be in series.

During operation, any typical motor, either unipolar or bipolar, is connected to the output terminals (refer to Appendix D). Full, Half, or Quarter step angle is available (step increments of 1/200, 1/400, 1/800, 1/1600, 1/3200 of a rev per pulse). When the unit is in stop mode, the motor will hold (parking) at either 25%, 50% or 0% (free) of full power. This system can be stalled without damage. Over-temp, over-current, over-voltage, and over-drive protection is standard. Output current (torque adjust) is "dial-able". See Appendix C.


The unit comes standard with translator-driver card, power supply with fuse, power switch, line filter, and IEC power cord. Input voltage is 110 vac, 60 cycle; 220 vac, 50/60 cycle is optional. Signal connectors are 20-pin IDC flat or DB-25 for input and 6-pin Molex for motor output. Tapped 6/32 (4 each) allow mounting from the bottom of the case. Cooling is conventional convection. No dropping resistors or fans are normally required. Indicators include "DC OK" and "AC ON".

SMD SYSTEM. The SMD system requires 4 inputs from an external device. A STEP pulse (clk), DIRECTION level, PARK level, and ABORT level are connected to the 20 pin P1 connector. The AP option (Auto-Park), if installed, will automatically reduce or PARK the motor power at stand-still. The ABORT may be ground or wired through safety limits. All signals must be at TTL +5 vdc unless the OP option (Optical Isolation) is installed. Refer to the MS driver card section for details of the SMD interface.

TST SYSTEM. The TST system includes an on-board step pulse generator. The front panel RUN/STOP switch (SPST) controls the generator. All TST and DSD systems are Auto-Park; automatic reduction of motor current to the PRK level when in STOP. The DIR switch (SPST) controls CW / CCW rotation. The SPEED dial (500K ohm) controls the pulse rate, which ranges from 0.001 to 10K pps depending on the generator R/C values. The SPEED dial maximum rate is adjusted by the internal trimmer. The WR (With Ramping) option adds acceleration to the pulse generator. The base speed, rate of ramp, and final speed can be adjusted by the internal trimmers. In addition to "on-the-box" front controls, the system can remotely controlled through the remote panel connector. The RP (Remote-Panel) option provides a DB-9S, 9 pin connector, instead of "on-the-box" front controls.


DSD SYSTEM. The DSD version is a Dial-Pot™ encoder interface which allows the accurate positioning of a step motor by rotating a dial. Applications include focus control, remote valves, steam control, and variable voltage. These systems feature Auto-Park (power-reduction at stand-still), over-speed protection, adjustable torque, and built-in braking. This system retains position during power-up; it will not "servo-crash".

There are three elements in the digital servo system; the motor, the driver, and the encoder. In a typical 1:1 system, one turn of the dial equals one rev of the motor. Other combinations are possible which produce either more speed or more resolution.

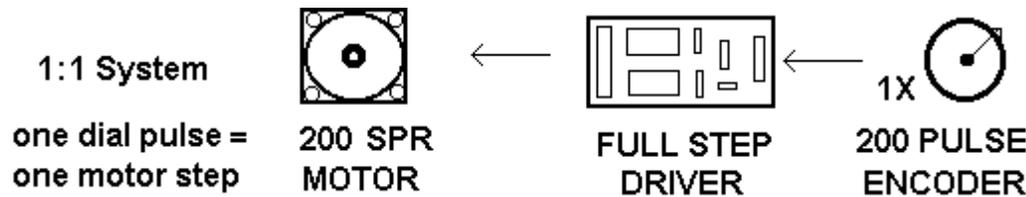

The motor can be either 200 or 400 steps per rev (800 spr motors are also available for some applications). The drive system can be either full/half or quarter step only. The encoder can be 100, 200, or 400 lines per turn. The encoder electronic mode can be either 1X (one pulse per line) or 4X mode (4 pulses per line or 4 times as many pulses per turn).

In the example of a fine resolution system, the motor would be 400 spr, the driver would be in quarter step (the system is now 1600 spr), and the encoder in 400 line; set to the 4X mode. One turn of the dial (1600 pulses) equals one motor rev; 1600 increments per turn. This system, however, would be difficult to adjust to 1/1600 of a position. In the 1X mode, however, one turn of the dial (400 pulses) would equal 1/4 of a motor rev and produce extremely fine adjustment. For even finer motion, a 100 line encoder would produce 1/16 of a rev in 1X mode and 1/4 rev in 4X mode.

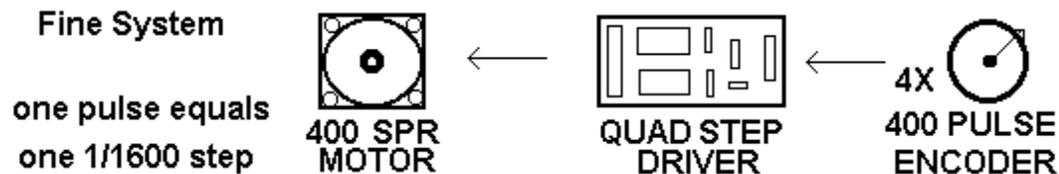


In the opposite situation, where speed is required, the minimum number of dial turns produces the maximum motor travel. In this example, the motor is 200 spr, the driver is in full step, and the encoder is 400 line. In 4X mode, one turn of the dial (1600 pulses) equals 8 revs of the motor (course). In 1X mode, one turn of the dial (400 pulses) equals 2 motor revs (fine). Note that in the high speed configuration of 8 revs per turn, slow turning of the dial is required to keep the motor speed below 800 to 1000 steps per second; typically the maximum pull-in speed of a step motor. Also the speed-torque curve of the motor must be sufficient for the load across the full speed range; faster dial turning equals less torque.

Fast System

one dial turn =
8 motor revs



200 SPR
MOTOR

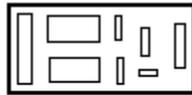

FULL STEP
DRIVER




4X
400 PULSE
ENCODER


An addition option is possible; a full/half switch on the driver. In the 1X mode and half step, one turn of the dial (400 pulses) equals 1 rev (1:1) and in the 4X mode (1600 pulses) equals 4 revs.

SMD ASSEMBLY. All SMD, TST, or DSD assemblies include a MS 2.0 step motor driver, all DC power supplies, and an IEC style power entry / line filter AC connector combination. Surge protection is included. The DC power supplies provide +5 vdc TTL computer (VCC) and +40 vdc motor (VMM). The VCC supply is over-current protected. In addition, a 1 amp fuse protects the entire assembly. The green chassis lamp indicates VMM power on. The neon lamp in the power switch indicates that AC power is present. Each assembly includes a motor connector; see Appendix D. On SMD's, the 20 pin CI cable connector provides access to the I/O signals, limit loop, home sensor, and VCC power/ground. Refer to Appendix A for connections to the CI or other front panel connectors.

SMD POWER SUPPLY WIRING DIAGRAM

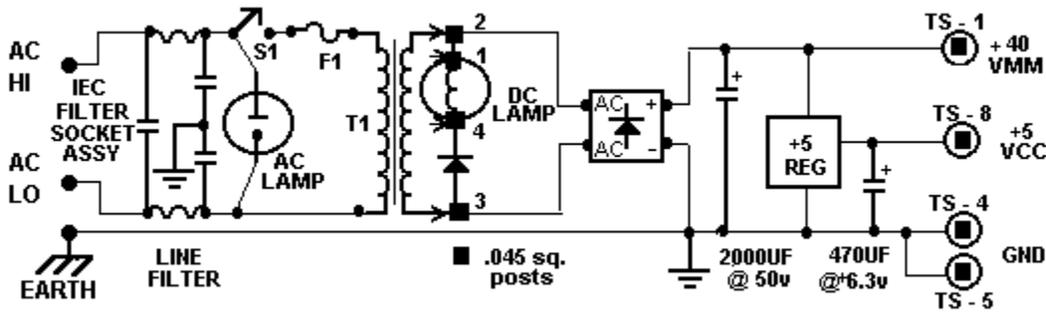

NOTE: NEVER REPLACE FUSE! FAILURE INDICATES DRIVER DAMAGE!

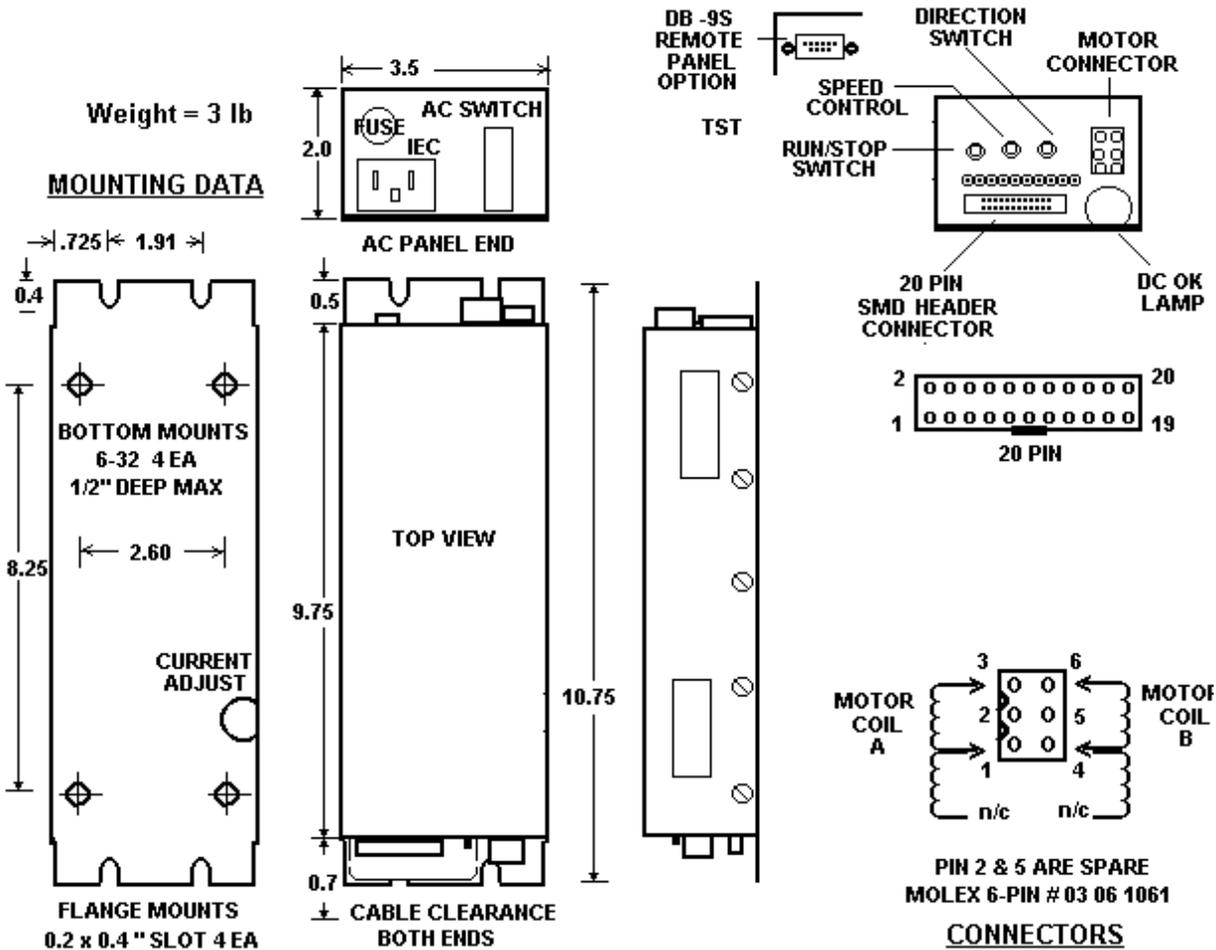

MS

SECTION 2: MS - MiniStep translator /driver card


OPERATION AND INSTALLATION

MANUAL

FOR MS AND MM SERIES

THE MOTION GROUP SERVICE CENTER
800-424-STEP
PO BOX 4585 MOUNTAIN VIEW, CA 94040 TEL: 650-969-5829 FAX: 650-968-6192

MS 2.0 STEP MOTOR TRANSLATOR/DRIVER 2 AMPS PER COIL IN FULL, HALF, OR QUAD STEP

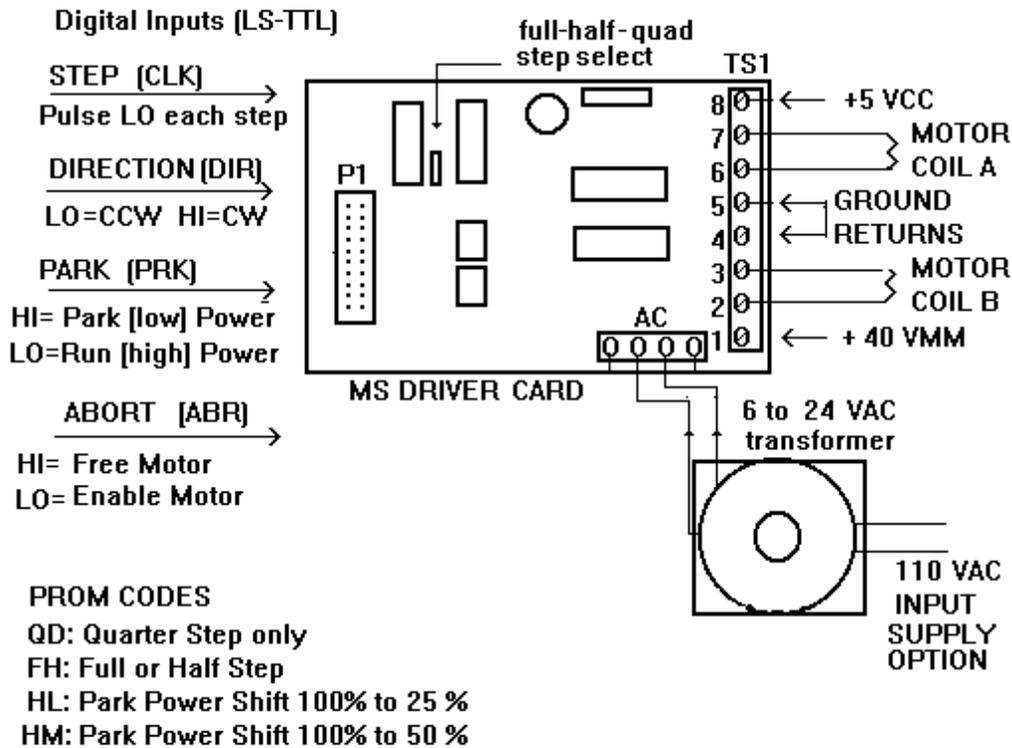

See Appendix A for P1 connector
 See Appendix B for Limit Loop
 See Appendix C for Current Adjustment
 See Appendix D for Motor connection
 See Appendix E for Mechanical Card
 See Appendix F for Home Sensor
 See Appendix G for Opto Isolation Option
 See Appendix H for AC Input Option

POWER SUPPLY REQUIREMENTS:

VCC = + 5 vdc TTL Logic
 @ 100 ma

VMM= + 5 to 40 vdc
 @ 10 to 2000 ma

PRODUCT DESCRIPTION

The MM & MS, Series 1 & 2, stepper motor driver, is a switching type, constant-current regulator which drives current pulses through the windings of a stepper motor. All stepper motors are stepped or rotated by changing the direction of the current flow through the windings in a unique sequence. Each change of current direction results in a step.

The driver contains two sections: (1) the step generator; and the (2) power drivers. The step generator is a digital logic system which receives input commands from a controller (typically a microprocessor) and generates a series of step signals. The power drivers receive the step signals and switch the phase of current in the motor windings.

The driver requires a minimum of four input signals: (1) the step pulse - STP, (2) the direction level - DIR, (3) the power level - PRK, and the enable signal - ABR. The step pulse (or step clock) to the input of the driver will cause a corresponding change of the output current resulting in one step (one unit of motor rotation). The direction input is a digital level signal which controls the direction of motor rotation. If the signal is true (High), the motor rotates in CW direction; if the signal is false (Low), the motor rotates in CCW direction. In addition to the step and direction inputs, the driver will accept an output power control input. This digital input, PARK, controls the amount of current delivered to the motor windings either run power or park power. If the signal is HI or floating, the driver is at reduced current; if LO the driver is at full current. The enable signal, ABoRt, sets the current to either off or on. If the signal is HI or floating, the driver is FREE (no current); if LO, the driver is enabled.

In addition to the digital input signals, the MS driver also requires a power supply input of unregulated D.C. voltage. The driver functions to control the current furnished by the D.C. supply. The combination of a D.C. supply and the MS driver is referred to as a current-regulated power supply, or constant-current motor driver. The driver regulates the current through the motor winding by rapidly switching on and off the D.C. voltage. This technique is referred to as switch-mode or chopper stabilized regulation. The driver also requires +5 TTL logic supply for the digital sections.

OPERATIONAL MODES

The driver can be operated in three modes: FULL-step or HALF-step, and QUAD-step only. In each of these modes, the output power control, PRK, can be controlled: (1) by an external device (microprocessor); (2) internally by the AUTO-PARK option; or (3) by a hardwired configuration (not recommended). PRK is used to reduce driver and motor heating during non-step periods.

THEORY OF OPERATION

The unique element in the driver is the current regulator device, referred to as the "driver chip". This driver has three main inputs: (1) the phase-control, F; (2) current-control, I0; (3) current-control, I1. The outputs of a driver are the connections to a single motor winding.

Internally an output section contains four power transistors configured in an H-bridge with two pair sourcing current and two pair sinking current. The motor winding is connected across the bridge. If one source transistor (at one end of the winding) and one sink transistor (at the other end) are turned on, then current flows through the winding. Alternately, if the other pair is on, then the current will flow through the windings in the opposite direction. The D.C. Supply is connected to the top (positive) and bottom (negative) of the H-bridge transistor pairs. An external resistor (typically 1 ohm or less) is inserted in series between the negative of the H-bridge and the negative of the power supply negative so that the total winding current flows through the resistor. When full winding current flows, the small voltage (400 mv) across the resistor is fed back to the comparator section and turns off the H-bridge transistors. After a fixed-time off to allow the transistors to settle and the feed-back voltage to dissipate, the bridge again turns on and current builds up in the winding until the voltage across the sense-resistor again trips the comparator.

The digital phase-input (F) level (HI or LO) selects which pair turns on and corresponds to the direction of current flow through the winding. The current controls, (I0 and I1) select one of four comparators; zero, low, medium, or full. The output is therefore a series of current pulses equal in amplitude and separated by the period of fixed time off. The value of the current sense resistor is pre-selected to produce a current amplitude equal to that of the current rating of the motor winding. If I0 and I1 select a comparator other than FULL, then the sense resistor feed-back voltage trips at less than full current. The reference voltage of the comparators is also available as an input to the device. By externally controlling this reference input, the output current can be varied between zero and full (i.e. microstepping).

The driver card contains two sections: (1) the step generator, which controls the digital levels of the phase (F) inputs and the drivers. The generator is a counter-PROM configured as a four-eight-sixteen counter. These outputs are combined through PROM gates into two outputs controlling the phase inputs (F) of the two driver IC's. Each step-clock causes the counter to toggle one step and the PROM decodes a pair of phase commands to the drivers which cause a winding current direction change resulting in a one step rotation of the motor. The direction input directs the decode to produce a CW or CCW rotation sequence.

INSTALLATION AND OPERATION

Before operating the MS & MM series, verify that the jumpers are correctly installed for the desired mode of operation and that the input connections are correct for that mode. Refer to the installation wiring diagrams found in the back of this manual. Locations of jumpers and signals are identified on the top side.

The configuration of the MS series requires attention to four areas: step size jumper and PROM type, power supply voltage, motor winding connection, and current control dial-pot setting. Refer to driver label for maximum current and voltage limits of the particular model. Refer to the Appendix section in the rear of this manual for details.

(1) POWER SUPPLY & MOTOR CONNECTIONS

| Signal Name | Terminal Strip TS1 | Data Connector P1 |
|-------------|--------------------|-------------------|
|-------------|--------------------|-------------------|

| | | |
|-----|-------|------|
| VMM | TS1-1 | none |
|-----|-------|------|

In general, the MS series requires an unregulated source of D.C. voltage connected to VMM. The current output must equal 1.414 the full rating of one motor winding. The voltage can be between 12 and 45 volts D.C. (maximum). The higher voltage is required only for higher step rates. In general, do not use a regulated power supply as performance is reduced. Refer to the unit label for the VMM maximum of that model.

| | | |
|-----|-------|------------------|
| VCC | TS1-8 | P1-13 & 14, 1, 6 |
|-----|-------|------------------|

If the optional +5vdc TTL supply is not installed, then an external 150ma digital supply is connected to the TS1-8 VCC connections. TS1-5 is provided for ground return. TS1-8 is protected by a 6.8vdc TRANSORB. The VCC is ALSO common through the digital control connector P1-13 & 14. The +5vdc can be furnished by: (1) the computer or controller power supply only, or both. If the system power is not controlled by one switch, always isolate the driver systems with a diode in the VCC connection. In any case, controller VCC and driver VCC MUST BE COMMON or other interface connections are required (opto isolation).

| | | |
|-----|-----------|-------------|
| GND | TS1-4 & 5 | P1-19, 3, 5 |
|-----|-----------|-------------|

In all cases, ground is COMMON to all grounds; digital VCC, analog VMM, chassis ground and green wire ground (AC power ground). If a dual (VMM & VCC) supply is used, then an equal ground lead is connected; 2 each wires to TS1-4 and 5. Always bridge the supply returns and connect to chassis.

If the AUTO-PARK option is not installed, the PRK control input must be directly driven by a single data bit or optional signal (Device Select or Motion Complete are typical signals from motor controller ports). The spare gate pad can be used as required to invert.

Abort Control Input (ABR) P1- 9 (see next)

The ABR input must be LO to step. If the input is HI or disconnected, the driver control output will output zero current. NOTE: the driver is not OFF, power is still being regulated to the zero condition. The motor will free-wheel. ABORT is normally only used in stand-by (position loss may occur), in series with safety switches (limits) or other emergency stop conditions.

Other Signals (CPU ABR and HOME) P1- 10,12 & P1- 4,16

Pin 12 is the normal input to P1-5 when the ABoRt Loop is used.

Pin 4, 16 is the output signal HOME back to the controlling device.

Spare Inputs P1- 18,8 & P1- 20,7

Pins 18 and 20 can be used for other signals to/from the card. See Chassis Signals connector. Pin 20 is normally keyed on free standing cards.

(3) Chassis Signals P1- 1 to 9 & P1- 2 to 10

These signals are normally used to provide for a convenient method of cabling the driver between the controller and the motor, power supply, chassis assemblies.

Home Sensor Pins P1- 1, 2, 3, 4

These pins power the optical home sensor circuit. SEE APPENDIX A & F. Pin 1 is VCC +5 power, pin 2 is VLED power, pin 3 is GND (ground), and pin 4 is the HOME input from the sensor.

Abort Loop Pins P1- 9 & P1- 10

These pins normally constitute the ABoRt Loop Safety (limits) System. The driver enable is output from the controller to pin 12 (CPU ABR) and output to the loop from pin 10 (to limit loop) and returned from the loop to pin 9 (ABR). The ABR loop is NORMALLY CLOSED; opening the loop for any reason FREES the motors. Never connect these signals to any potential or device except passive switches or relays. Door locks and other safety switches may be inserted in the loop. See Appendix B.

Spare Pins P1- 6, 5, 7, 8

These pins are used as required to provide VCC (pin 6) and GND (pin 5) to the chassis system. Pins 7 and 8 are user pins which are generally jumped as required to the spare pins on the data connector. See Appendix A.

(4) FULL/HALF/QUARTER STEP SELECT

This series will operate either in FULL/HALF step or QUARTER step only mode. FULL/HALF requires the FH PROM to be installed and the mode pin to be jumped either FULL or HALF with a dip-clip jumper. The jumper pins are located next to the top of the PROM socket. See Appendix F.

In QUAD step mode, the QD PROM is installed and the mode pin is jumped to the QUAD pin. Conversion is a field operation.

The PROMS are also labeled with the current control selection.

HL: shifts power HIGH (100%) to LOW (25%) during parking.

HM: shifts power HIGH (100%) to MED (60%) during parking.

AP: auto-park control is installed.

(5) CURRENT CONTROL DIAL

The current dial sets the 100% power level of the driver outputs as required. Refer to App C.

(6) SPARE GATES

The Spare Gate location is normally used for an option. The gates are used as required or: on-board timer, AUTO-PARK, Step Clk inversion, AD5 inversion, encoder decode chip and spare. Pull-ups are required on open-collector logic.

(7) CURRENT SENSE RESISTORS SA, SB


The current sense resistors are factory installed to reflect the highest current of the driver model.

NOTE: High levels of current (full power park or constant low speed stepping) may cause the driver chip's overtemp limit sensors to cut back the output to a safe (cooler) level resulting in reduced power and erratic stepping. NEVER add additional resistance in series with the motor windings or add caps across them. NEVER connect the center taps of SIX WIRE (unipolar) motors to VMM (see Appendix D). NEVER confuse the sense or feedback resistors (SA,SB) with "dropping resistors" which are NOT used in constant-current, bipolar drivers like the MS or MM series. Always simply call the Service Center if there are questions about the operation of the units.



APPENDIX A: CI CABLE DIAGRAM FOR SMD SERIES

COLOR = MOLEX PIN #



| | | | | | |
|--------------------------|-----|-----------------------------------------------------------------|-----------------------------|-----|-----------------------------------------------------------------|
| 1: SENSOR +5 VDC | BLK | 1 | 2: SENSOR LED ANODE + | WHT | 2 |
| 3: SENSOR / LED GND | GRY | 3 | 4: SENSOR (home sensor) | PUR | 4 |
| 5: USER GROUND | BLU | 1 | 6: USER + 5 VDC | GRN | 2 |
| 7: KEY SPARE | YEL | 3 | 8: SPARE | ORN | 4 |
| 9: ABR (from limit loop) | RED | 1 | 10: CPU ABR (to limit loop) | BRN | 2 |
| <hr/> | | | | | |
| 11: PRK (power select) | BLK | | 12: CPU ABR (from cpu) | WHT | |
| 13: +5 VDC (cpu) | GRY | | 14: +5 VDC (cpu) | PUR | |
| 15: CLK (step pulse) | BLU | | 16: SENSOR (to cpu) | GRN | |
| 17: DIR (direction) | YEL | | 18: SPARE (same as 8) | ORN | |
| 19: GROUND (cpu) | RED | | 20: KEY (same as 7) | BRN | |

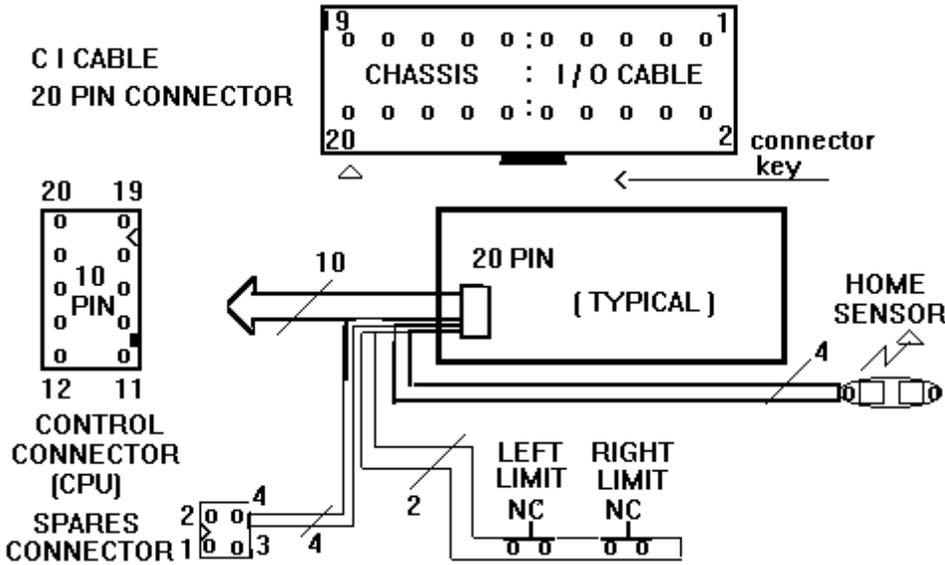

APPENDIX A: LOCAL PANEL WIRING DIAGRAM FOR TST SERIES (without ramping). Page 1\1

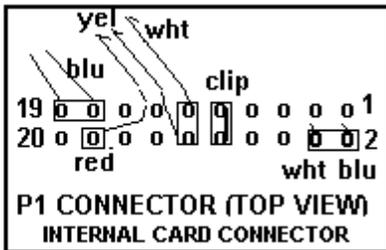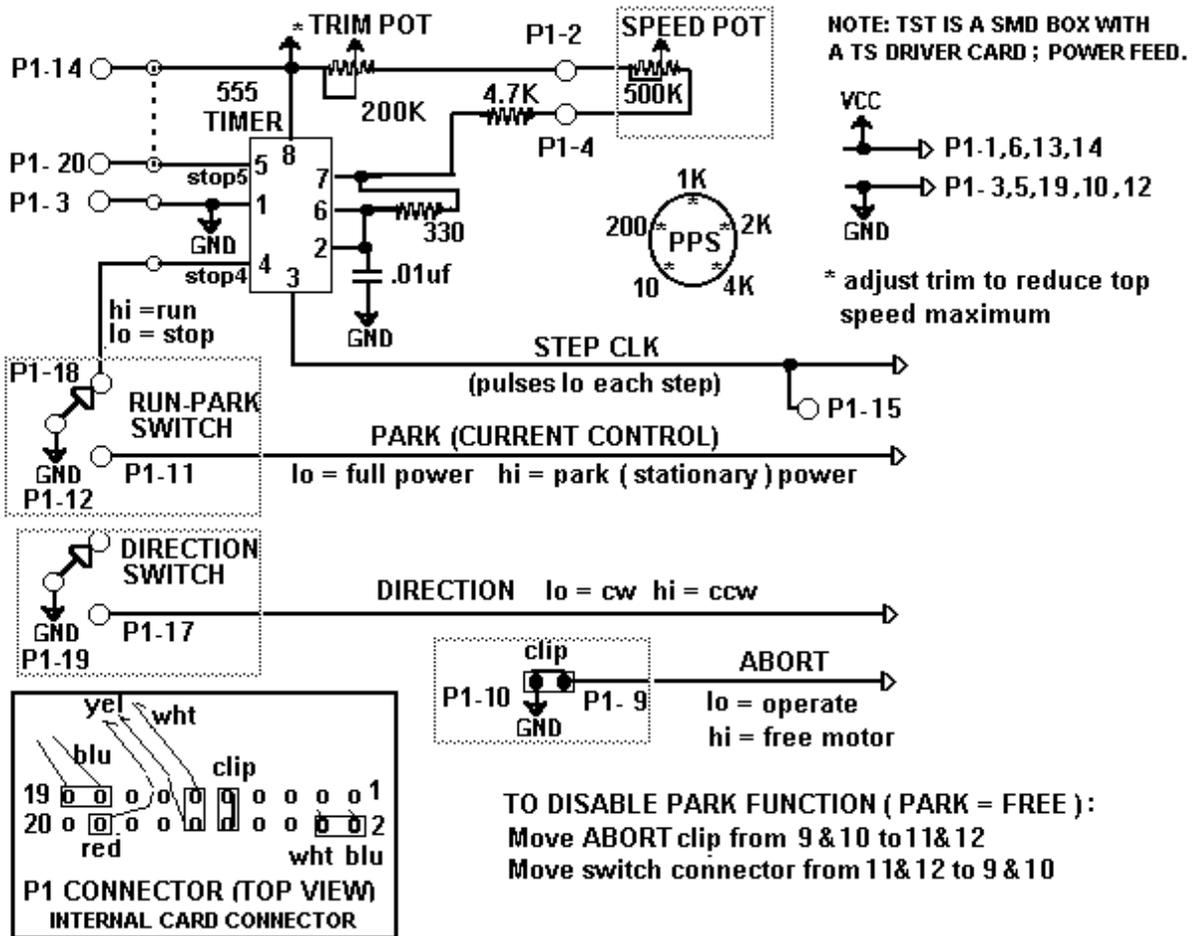


TO DISABLE PARK FUNCTION (PARK = FREE) :
 Move ABORT clip from 9 & 10 to 11 & 12
 Move switch connector from 11 & 12 to 9 & 10

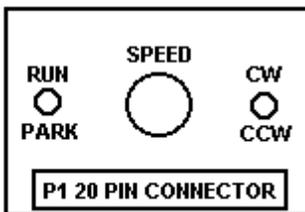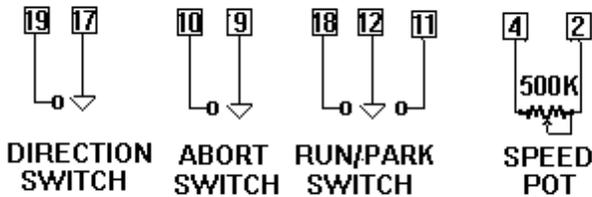


LOCAL PANEL CONTROLS

NOTE: FOR REMOTE OR PLC OPERATION, OPTO-ISOLATION OR ISOLATED CONTACTS REQUIRED.


When using the P1 connector to remote the front controls, the local switches (if present) must be in the PARK and CCW positions.
 The internal ABORT clip must be removed if a remote ABORT switch is used.

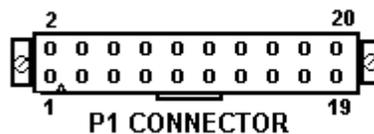

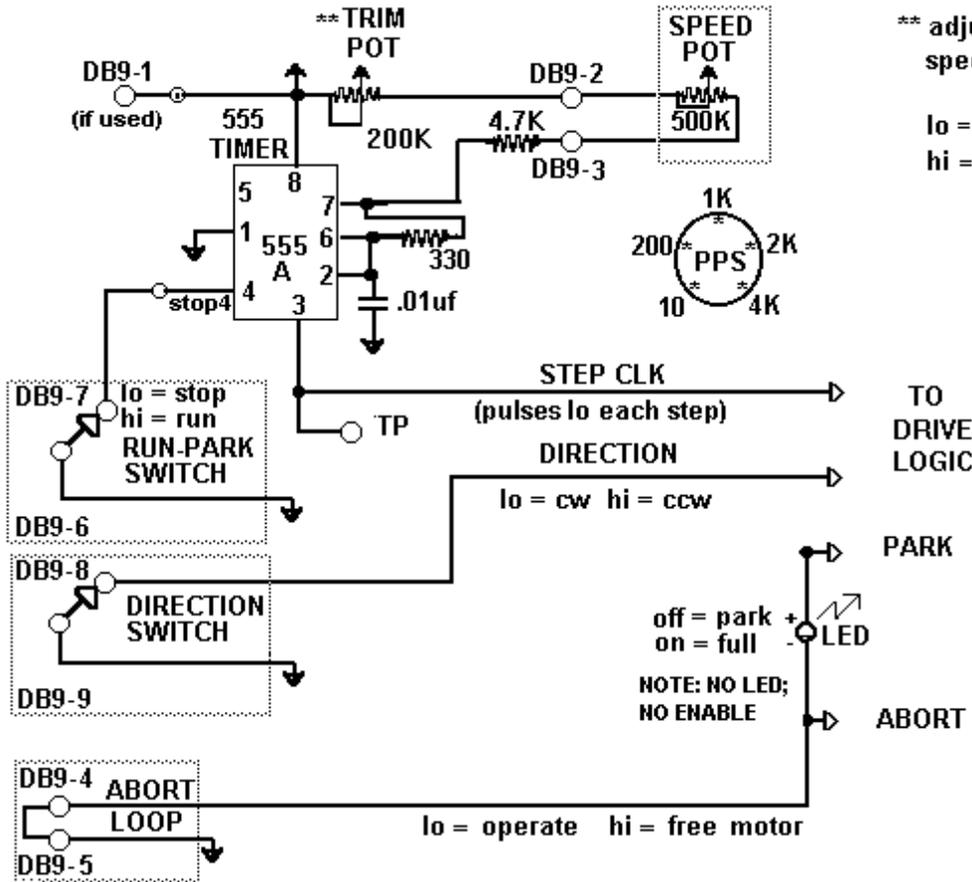


** adjust trim to reduce top speed maximum

lo = gnd = closed
hi = float = open

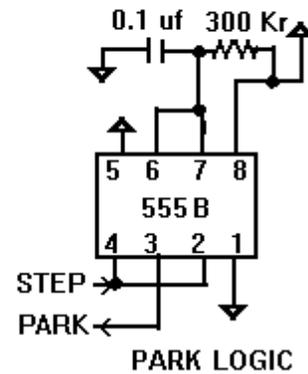

NOTE: ISOLATED CONTACTS REQUIRED

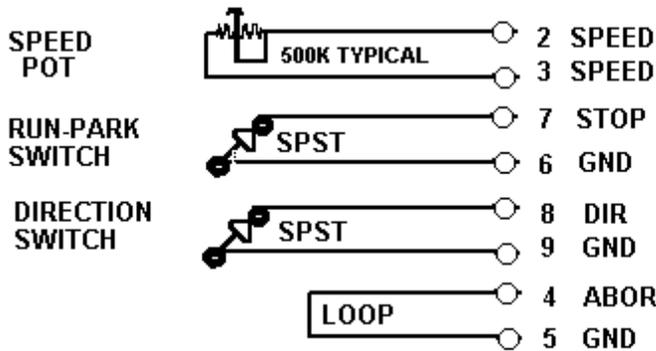


HIGH OHMS=SLOWER
LOWER OHMS=FASTER






HI=RUN TIMER=RUN POWER
LO=STOP TIMER=PARK POWER

HI=CW
LO=CCW

OPEN=FREE
CLOSED=RUN

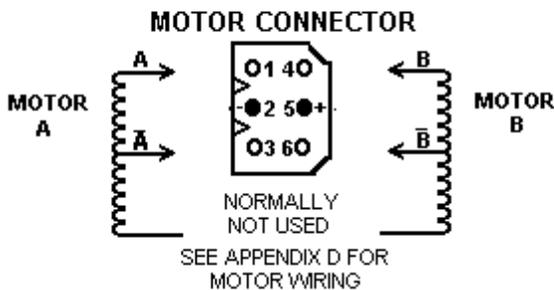


| REMOTE PANEL (RP) | |
|-------------------|-------------|
| DB9 CONNECTOR | |
| DB9-S | P1 (20 PIN) |
| 1 - RED | - 1 VCC |
| 2 - YEL | - 2 SPEED |
| 3 - BLU | - 4 SPEED |
| 4 - GRY | - 9 ABORT |
| 5 - BLK | - 10 GND |
| 6 - ORN | - 12 GND |
| 7 - GRN | - 18 STOP4 |
| 8 - PUP | - 17 DIR |
| 9 - WHT | - 19 GND |

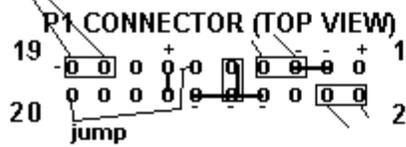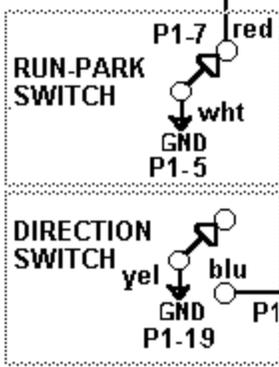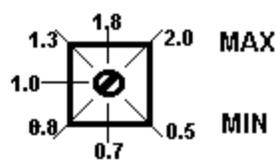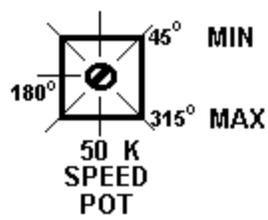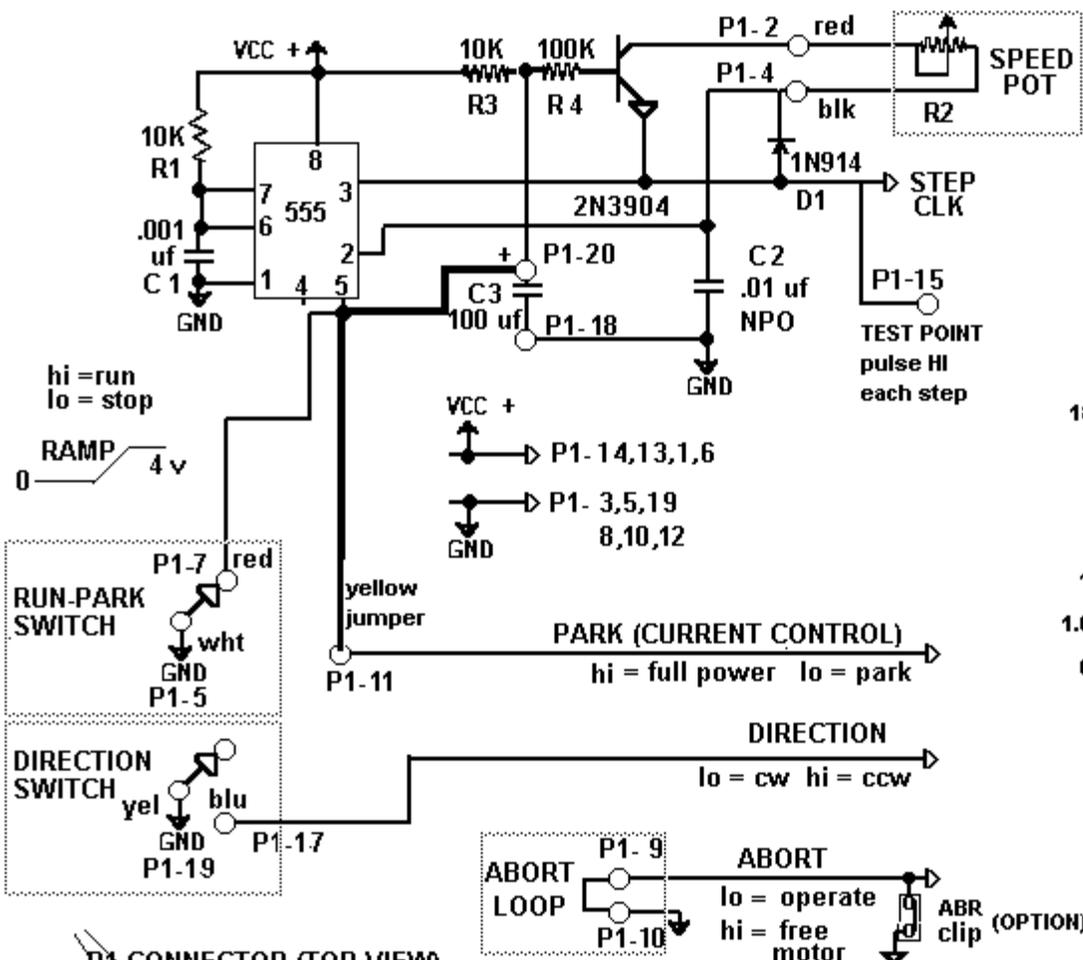


JUMP 20 to 11

- R3 C3 = RAMP TIME [.5 TO 2 SEC]
- R2 C2 = SPEED [30 TO 10K PPS]
- R1 C1 = PULSE WIDTH [1 TO 10 MS]

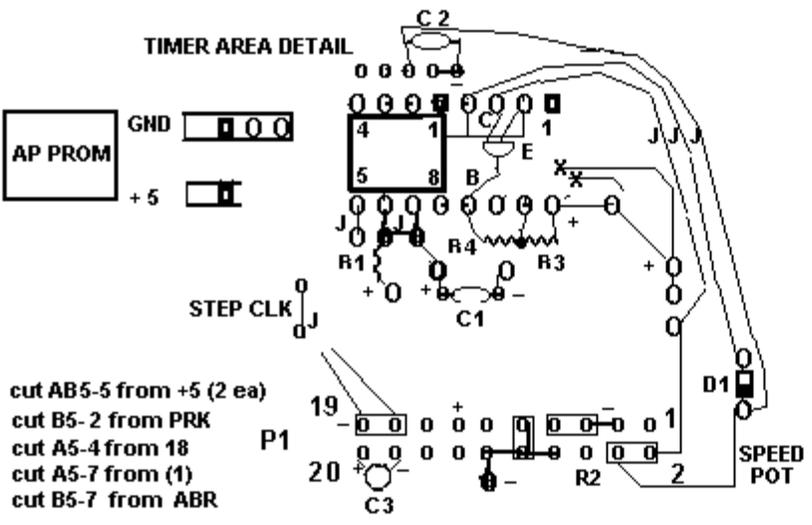


| REMOTE PANEL (RP) DB9 CONNECTOR | |
|---------------------------------|-------------|
| DB9-S | P1 (20 PIN) |
| 1-RED | -1 VCC |
| 2-YEL | -2 SPEED |
| 3-BLU | -4 SPEED |
| 4-GRY | -9 ABORT |
| 5-BLK | -10 GND |
| 6-ORN | -12 GND |
| 7-GRN | -7 STOP5 |
| 8-PUP | -17 DIR |
| 9-WHT | -19 GND |

APPENDIX A: CI CABLE DIAGRAM FOR DSD SYSTEM (W/ COUNTER)

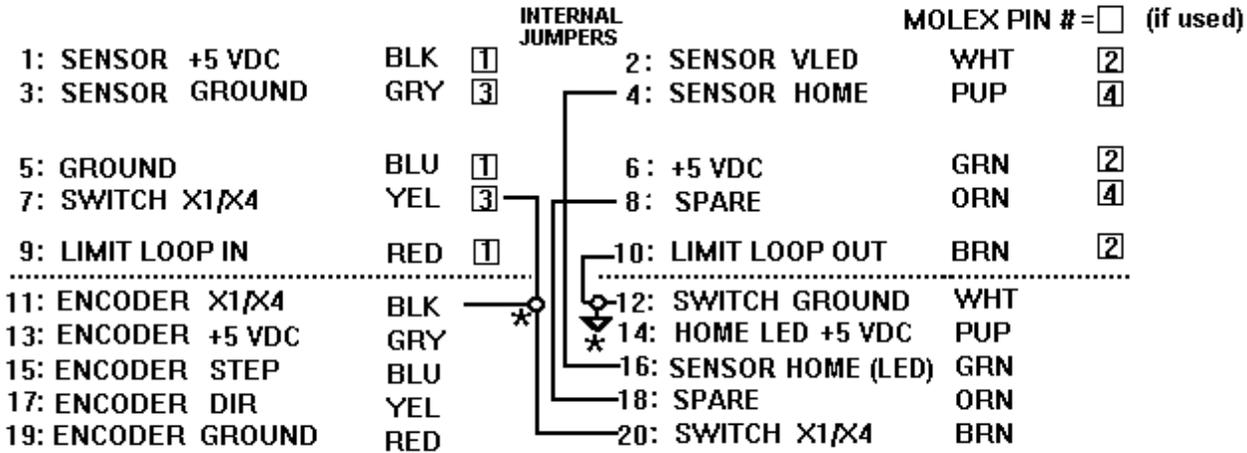


* JUMPERS FOR DS SYSTEMS ONLY



CI CABLE
20 PIN CONNECTOR

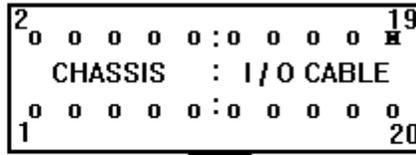


← connector key

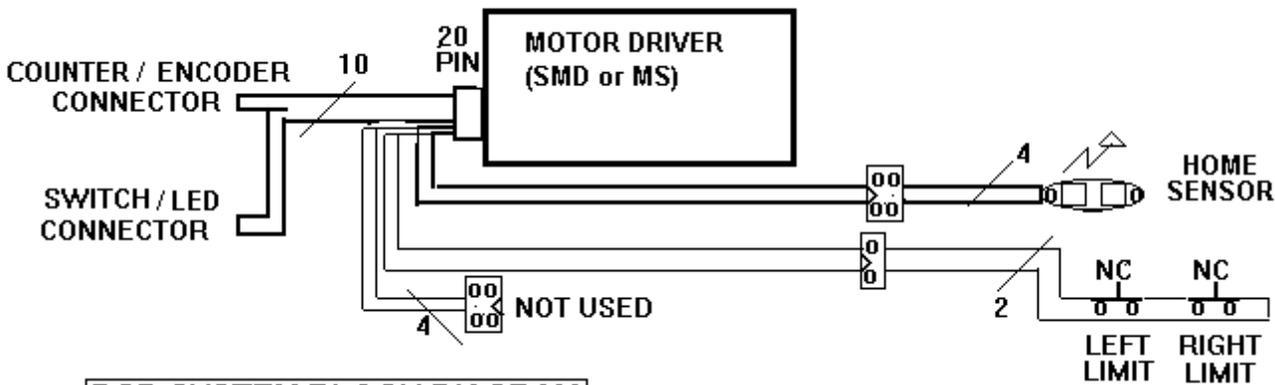

DSD SYSTEM BLOCK DIAGRAM

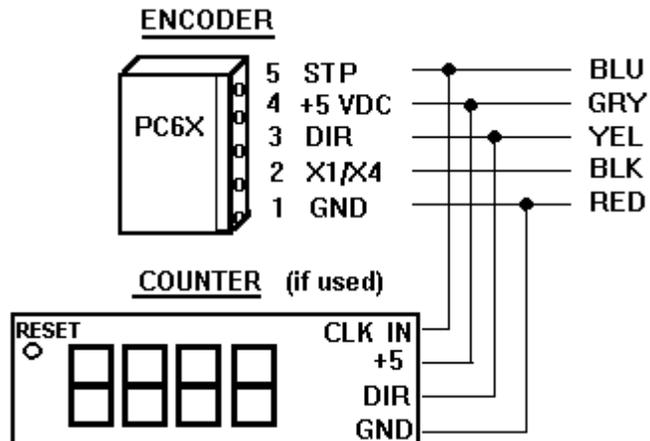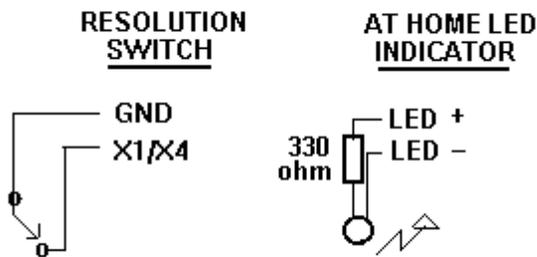

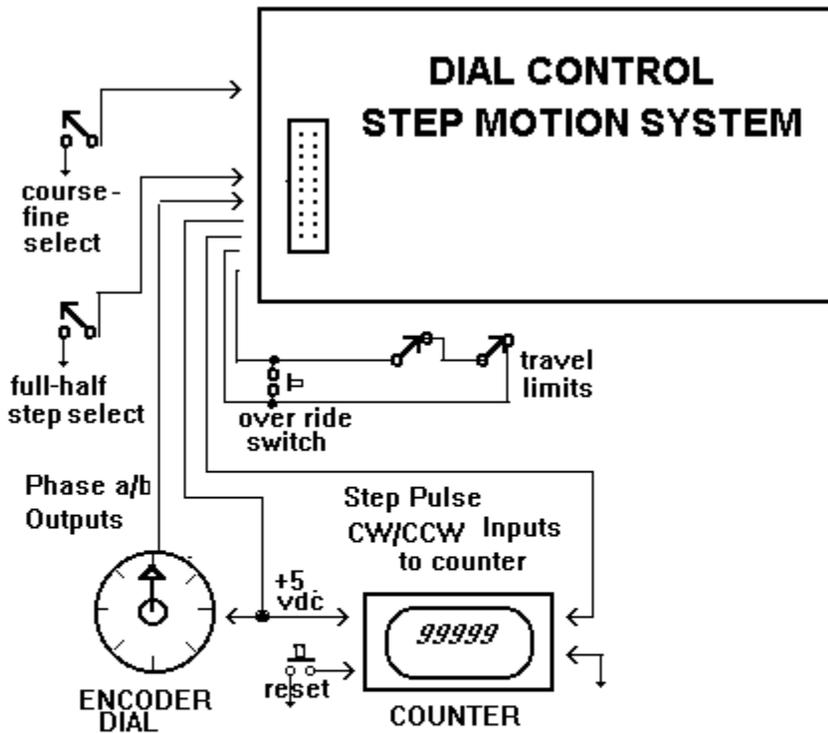

ENCODER INPUT OPTION & AUTO-POWER REDUCTION

ENCODER ASSEMBLY (TORQUE LOADED)

| PART NUMBER | COURSE | FINE | PULSES PER ENCODER REV |
|-------------|--------|------|------------------------|
| S-100 | 400 | 100 | |
| S-200 | 800 | 200 | |
| S-400 | 1600 | 400 | |

HOMING. A major advantage of a digital Open-Loop step system is the ability to operate plus or minus zero steps (no error). Two conditions are required. One is that the motor is sufficient for the load in normal operation and second, that a reference position, commonly called the "home position", be consistently established during initialization of the system. When step motors are rotated by counting (clocking) out a number of steps, in theory, the motion will take place +/- zero steps. The exact mechanical position of the motor can vary by the motor step accuracy; typically +/- 3 % of one step (non-cumulative). A proof of +/- zero step operation is, first, to reference a starting position of the motor or "home". During homing, the motor is stepped backwards into a switch, reversed, and then stepped forward until the switch opens. The point of interest is not the exact mechanical position but rather on which step the switch changed state. For that reason, only high resolution "PHOTO-LOGIC" optical-beam switches are used in TMG systems.

SLIP-DETECTION. After the motor is home, the controller position counter is reset to the home position, typically position 1 (one step out of the sensor). The motor is then stepped CW to any position. To slip-detect the system, the motor is returned to position 1. If the sensor remains open, then the motor is stepped to position 0. If the sensor closes, the system is operating +/- zero steps (error free). Note that a single step lost (slip) will always result in at least a movement of 4 full steps away from the correct position. Open loop systems are slip-detected at regular intervals to prove continuing slip-free operation.


CENTER HOME AND CONTIGUOUS SLIP DETECTION. If the home sensor is located at the center of axis motion and a step bar is mounted along the entire motion path, then the home position can be verified each time the system crosses the center line. A stepped bar is thin strip with a left high side and a right low side. The high to low edge is the center line.

LASH COMPENSATION. A major advantage of steppers is in their "repeatability" which is typically less than .01 % because the digital controls are not affected by temperature, aging, voltage or adjustment. This allows errors such as lash and distortion to be zeroed-out.


Lash compensation adds or subtracts steps, at each change of direction or because of other forces, to take-up the lash error. Lash compensation is accomplished during the slip-detection process. When the system is slip-detected the first time, the sensor will not close at position 0 because of the lash; home LED remains off. At this point, the system is single-stepped CCW until the sensor closes; home LED is on. The number of CCW steps is the lash compensation value. The system is re-homed and the counter loaded with this value (see At home command). The motor is then moved some number of steps CW, returned to position 1 (sensor open), and finally position 0 (sensor closed). The system is +/- zero steps.

Screw distortion error occurs when the screw pitch, which is so many turns per inch, does not move the correct distance after the correct number of turns of the motor. For example, a 10 turn screw should cause linear travel of 1 inch every 2000 steps (200 step/rev motor). If, rather than commanding the motor controller to go in 2000 step increments, the controller moves to absolute positions such as 2000, 4001, 6003, 7999, ect.; the error is eliminated. This technique requires a control system which carries a "map" with each individual machine. The EEPROM memory is suitable for this purpose.

SUPER HOMING. In high resolution systems, two sensors are used. The first sensor, the home sensor, is mounted to the motion platform in the typical configuration. The second sensor, the index sensor, is located as an index detector on the motor shaft. The index can be either a disk with a tab or a long pin. During the homing operation, the motor is stepped backwards until the first sensor is blocked. The motor, however, continues to rotate until the second or index mark is detected. The system is now "homed to the step". TMG systems with Super-Homing use two identical "PHOTO-LOGIC" sensors wire-ORed together so that both must be blocked before the home signal is detected. The H or home command of the motion controller will operate with either single or double sensors.

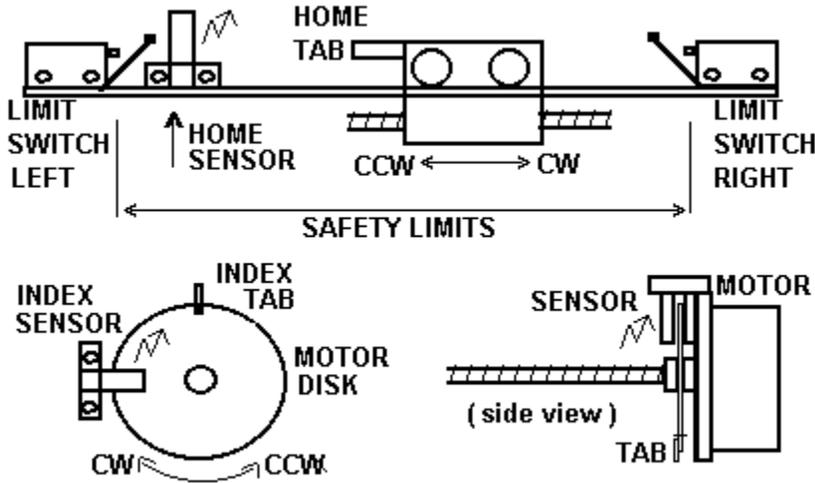

ABORT LOOP FUNCTION. In TMG systems, the ABORT loop is used to remove all winding power to the motor during an out-of-bounds condition. The ABORT feature can be used to provide hard-limits, emergency stop, door inter-locks, and other safety features. As the ABR input, to the driver, must be LO (ground) for the driver to step; opening the loop will stop (free) the motor regardless of the control logic. The diagram is typical of TMG "Fail-Safe, Hard-Soft" limit loops.

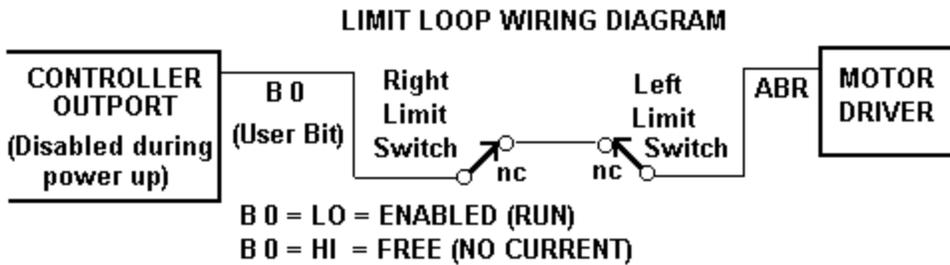

NOTE: CONTRARY TO POPULAR

PRACTICE, IT IS UNWISE AND UNSAFE TO SENSE LIMITS AND OTHER SAFETY CONDITIONS THROUGH THE COMPUTER INPUTS PORTS.


All motion products, regardless of their final intended form, should initially incorporate home sensors and slip-detection in order to prove correct positioning during product development, particularly during software de-bugging. Typically, a test routine is established which passes slip-detection. Any detrimental modification or code flaw will be flagged by this routine.

APPENDIX C: MOTOR CURRENT ADJUSTMENT MM 2.0 (2 AMP MAX) SERIES

**TO SET CURRENT; ALIGN SLOT TO MARK; CAREFULLY.
 POT ADJUSTS PERCENTAGE OF MAX POWER. 2 AMP x 50 % = 1 AMP /COIL**

IN GENERAL:

**CURRENT TOO LOW; MOTOR SLIP FROM REDUCED TORQUE
 CURRENT CORRECT; SMOOTH ROTATION WITH NO SLIP OR RESONANCE
 CURRENT TOO HIGH; EXCESSIVE NOISE, SLIP, MOTOR OVERHEATING
 (ABOVE 85 C), AND POOR RAMP PERFORMANCE**

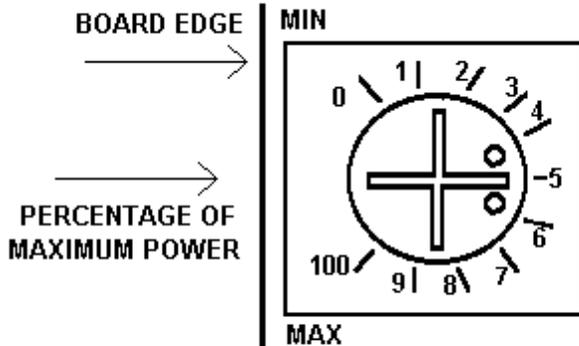

**NOTE:
 DRIVER WILL REDUCE
 CURRENT IF OPERATED
 CONTINUOUSLY AT SLOW
 RATES (200 PPS) WITH
 CURRENT SET ABOVE 60 %.**

**WARNING: CONSTANT CURRENT, AUTO-PARKING, BI-POLAR DRIVERS !
 DO NOT ATTEMPT TO MEASURE CURRENT WITHOUT SPECIAL INSTRUCTION**

Performance of a stepper motor based system depends more on the electronic drivers used than it does on the motor itself. A step motor (both PM and Hybrid type) is made to step by sequencing the orientations of the magnetic fields in two coils. The UNIPOLAR drive method of is illustrated, in the figure, using just ONE coil of the motor. Note that the center tap of the coil is connected to the positive motor supply voltage. An electronic circuit, represented by the switch, then connects one end or the other to ground for current to flow from the center tap to the grounded end. The most significant factor is that only one-half of the coil is used at any given time and that the magnetic field intensity (motor torque) is proportional to the product of the number of turns in the coil and the current passing through the coil.

Motors designed for BIPOLAR drivers will often have only four leads. However some manufactures will provide the motors in 8 wire versions to offer a performance choice for bipolar drive users as in figures C & D. Four lead bipolar motors may use larger wire, since only half the windings are required in the given space of the motor body. The paralleling in figure C is the equivalent of this to achieve lower winding resistance and thereby doubling motor efficiency. The other alternative for the motor designers is to use a greater number of turns in the winding space. This is shown by figures B & D and results in more torque with a lower coil current but a subsequent loss of high speed torque.

Although step motors are often classified as bipolar or unipolar (2 phase or 4 phase), these terms are more accurately applied to the types of electronic circuit used to drive the motor. Bipolar drivers can drive 4,5,6 and 8 wire motors. When the motor is described as unipolar, the specifications are presented with the assumption that the motor will be driven with a unipolar drive. Therefore the specifications must be translated to bipolar when the motor is used with a bipolar driver. In general, the translation is similar to a unipolar driver with dropping resistors in series with the center taps; referred to as L over $x R$ with R equal to the motor winding resistance. For example, a L over $4R$ unipolar driver has a resistor equal to 4 times the winding resistance. In bipolar, the L over R ratio is the ratio of the motor voltage to the supply voltage. A L over $4R$ bipolar drive, for example, would be a 6 volt motor and a 24 volt power supply. Performance would be similar to the $L/4R$ torque curve of a unipolar motor. The figures identify the various connection options when using a bipolar driver with 6 or 8 wire motors.

A: SINGLE COILS. Identical to unipolar specification (if the supply voltage equals the specified motor voltage). Normal connection of a bipolar driver to 6 wire motor.

B & D: SERIES COILS. This configuration will produce torque greater than the unipolar specification indicates. To stay within the power (wattage) rating of the motor, reduce the unipolar specified current by 30%; depending on the duty-cycle of the system (park time). Note that the torque curve of this configuration is considerably fore-shortened as this motor is now the same as a motor with a rating of twice the voltage (slower motor).







C: PARALLEL COILS. When this configuration is driven at the unipolar current, the motor will perform identical to the specification but the motor will dissipate only one-half the power (it is twice as efficient). When the current is increased by 1.414, to drive the motor at it's full power rating, the motor torque is increased by approximately 60% Note that this torque curve is extended by four times (high speed system).

Resonance (vibration) of a step motion system depends on the speed and power range of the motor. Fast windings (A & C) are "quicker" and may break into resonance easier than slow (B & D). Power windings (B & D) may deliver "excessive" power (torque) to the system and produce resonance. In general, resonance indicates, except at the low (100 sps) and mid-frequency (1000 sps) bands, excessive power; therefore reduce the driver current for smoother operation or wire the motor for "softer" response.




NOTES: If a motor runs "backwards" with respect to software direction, transpose the connections of ONE coil. For MS series driver cards, pins 2 & 3 or 6 & 7; SID / SMD driver boxes, pins 1 & 3 or 5 & 6.

Five wire motors are really 6 wire motors with the center tap common. The center tap must be connected to the motor supply voltage. If phases 1, 2, 3 or 4 are crossed, motor will not rotate (hums). For MS cards, pin 1 is VMM, for SID /SMD (if connected), pin 5 is VMM and pin 2 is GND.

Systems with pin 5 & 2 connected are used to power external relays or solinoid valves. The pins are keyed (reversed). Never attempt to connect any motor leads to pin 2 and only 5 wire center taps to pin 5. Pins 2 & 5 are normally not connected and used to store the unused leads of 6 or 8 wire motors.

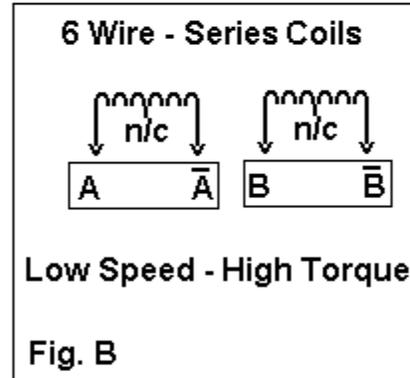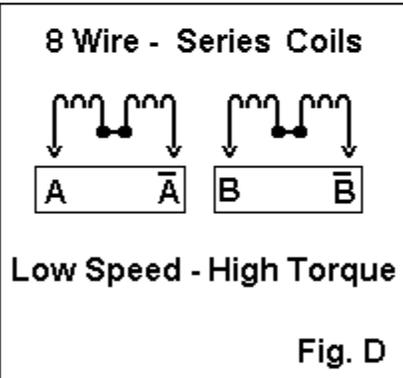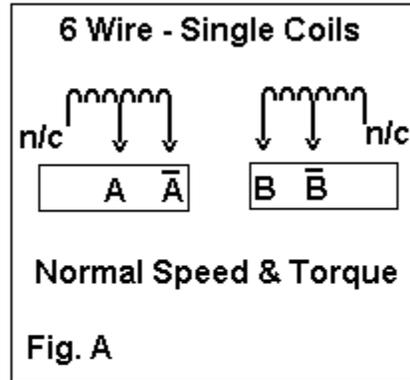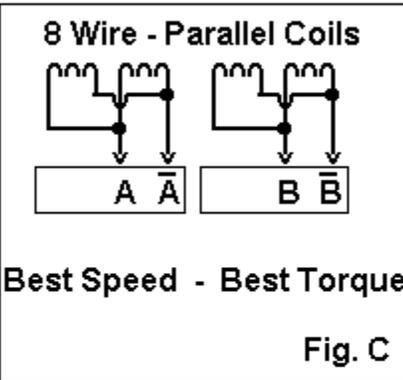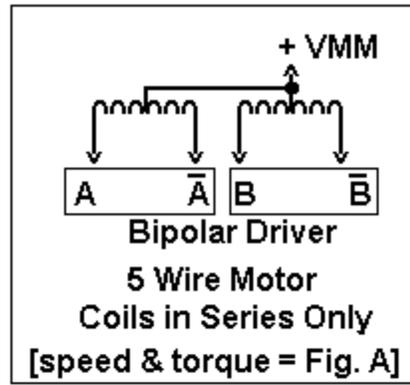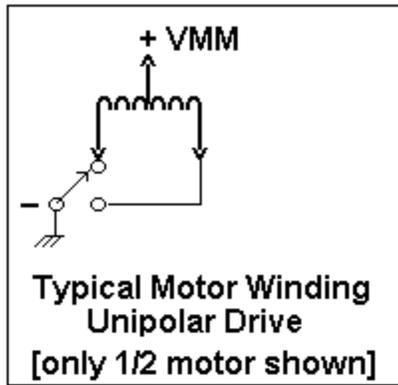

MOTION GROUP MOTOR CONNECTORS

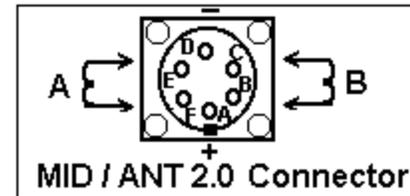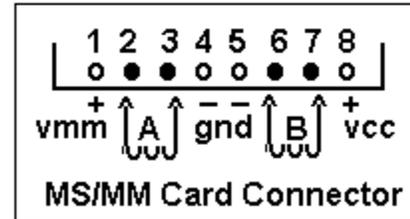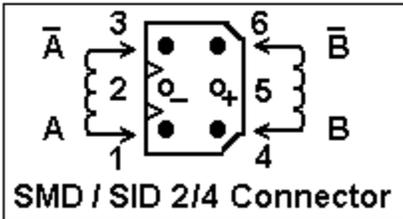

The connectors used on Motion Group equipment are nylon connectors are manufactured by Molex and are referred to as .062 style (pin diameter) or .093 (large driver motors only). They are available from Newark, Allied, and Digi-Key and come in 1 to 36 positions with locking and mounting tabs which snap-in to punched holes on brackets or enclosures.

| TYPICAL \$ | POLES | TYPE | PART # | NEWARK # | USED ON |
|------------|----------|-------------|------------|----------|----------------------|
| 5.84/10 | 4 (.062) | MALE HOOD | 03-06-2041 | 31F1004 | HOME SENSOR ASSEMBLY |
| 5.95/10 | 4 (.062) | FEMALE RECT | 03-06-1041 | 31F1005 | HOME SENSOR CABLE |
| 1.86/5 | 6 (.062) | MALE HOOD | 03-06-2062 | 31F1008 | STEP MOTOR ASSY |
| 2.07/5 | 6 (.062) | FEMALE RECT | 03-06-1061 | 31F1009 | MOTOR OUTPUT |
| 1.86/5 | 6 (.093) | MALE HOOD | 03-06-2062 | 31F1008 | STEP MOTOR ASSY |
| 2.07/5 | 6 (.093) | FEMALE RECT | 03-06-1061 | 31F1009 | MOTOR OUTPUT |

(Strain Relief Hoods are available on request)

Contacts for Connector Sets .062 SIZE

| | | | | | |
|------|----------------|-----------|------------|---------|------------------|
| 6.79 | FEMALE SOCKETS | LARGE TAB | 02-06-1103 | 31F1027 | 22-18 GAUGE WIRE |
| | MALE PINS | LARGE TAB | 02-06-2103 | 31F1026 | 22-18 GAUGE WIRE |
| | FEMALE SOCKETS | SMALL TAB | 02-06-1132 | 31F1029 | 30-22 GAUGE WIRE |
| | MALE PINS | SMALL TAB | 02-06-2132 | 31F1028 | 30-22 GAUGE WIRE |

Contacts for Connector Sets .093 SIZE

| | | | | | |
|------|----------------|-----------|------------|---------|------------------|
| 6.79 | FEMALE SOCKETS | LARGE TAB | 02-06-1103 | 31F1027 | 18-14 GAUGE WIRE |
| | MALE PINS | LARGE TAB | 02-06-2103 | 31F1026 | 18-14 GAUGE WIRE |
| | FEMALE SOCKETS | SMALL TAB | 02-06-1132 | 31F1029 | 22-18 GAUGE WIRE |
| | MALE PINS | SMALL TAB | 02-06-2132 | 31F1028 | 22-18 GAUGE WIRE |

In general, single wires use small tab contact; double wires use the large tab

Tooling

| | | | |
|-----|-----------------------|---------------------------|--------------------------------|
| 105 | RATCHET TOOL .062 DIA | HTR-2262 11-01-006 30F338 | MAKES PERFECT CRIMPS |
| 105 | RATCHET TOOL .093 DIA | HTR-XXXX 11-01-006 30F338 | MAKES PERFECT CRIMPS |
| 13 | HAND TOOL | HT-1921 11-01-0015 | 31F1049 REQUIRES PRACTICE |
| 12 | EXTRACTOR .062 DIA | HT-2285 11-03-0002 | 30F773 SPRING LOADED PUNCH-OUT |
| 12 | EXTRACTOR .093 DIA | | |

Nylon Connector Designer/Service Kit

Contains male/female housing assortment, hand crimper, pin extractor (not as easy to use as spring extractor; see above), contacts, and case.

| | | | | |
|----|--------------|------|--------|--------|
| 40 | DESIGNER KIT | .062 | WM-072 | 30F774 |
| 40 | DESIGNER KIT | .093 | | |

All of the above, including custom cable sets are available from the factory.

Note: When disconnecting, grasp the mounting tabs, (not the wires) and rock from top to bottom (unseat the locking bump) rather than side to side and then pull the connection apart. The connections unseat easily with the right technique.

Contact factory for Heavy Duty Connectors with Metal Shells, Retainers, and Strain-Reliefs.

SPECIFICATIONS - SMD 2.0

| PARAMETER | | MIN | MAX | UNIT |
|-------------------------|----|------|------|------|
| Power | | | | |
| Motor supply voltage | | 12 | 40 | VDC |
| Current (no motor) | | 150 | 160 | ma |
| PWM frequency | | | | |
| MD10A | 18 | 24 | | Khz |
| Motor current | | | | |
| MS2.0 | | 0.05 | 2.0 | Amp |
| Step pulse input | | | | |
| Voltage | 0 | +5.0 | | VDC |
| Sink current | | 12 | 20 | ma |
| Pulse high | | 1 | | uSec |
| Pulse low | | 1 | | uSec |
| Rise time | | | 0.5 | uSec |
| Fall time | | | 0.5 | uSec |
| Frequency | | | 500 | KHz |
| Logic '1' volts | | +1.8 | +2.0 | VDC |
| Direction input | | | | |
| Voltage | 0 | +5.0 | | VDC |
| Sink current | | 12 | 20 | ma |
| Logic '1' volts | | +1.8 | +2.0 | VDC |

Note: The step pulse input must be a logic 1 (high) during direction input change.

| | | | | |
|---------------------------|--|-------------------|-----|----|
| Environmental | | | | |
| Operating temperature | | -20 | +50 | C |
| Humidity (non-condensing) | | 0 | 95 | % |
| Shock | | 100 | | G |
| Altitude | | 30.000 | | FT |
| Mechanical | | | | |
| Weight | | 3 | | lb |
| Dimensions | | 2" x 3.5" x 11.0" | | |
| Mounting hole centers | | 2.625" x 8.250" | | |
| Mounting screw size | | #6-32 x 1/2" max | | |

THE MOTION GROUP

**SERVICE CENTER
800-424-STEP**

PO BOX 4585 MOUNTAIN VIEW, CA 94040

TEL: 650-969-5829 FAX: 650-968-6192

PURCHASE AGREEMENT

Purchase of any item from THE MOTION GROUP represents a agreement between THE MOTION GROUP and the customer. Therefore the customer agrees that all information contained in the included documentation, drawings, and software is the exclusive property of THE MOTION GROUP and that the customer is bound to prevent dissemination of this information to unauthorized parties.

The above mentioned information represents the "Intellectual Property" of THE MOTION GROUP and is thereby protected by the Copywrite Act of 1988. In particular, the firmware tables, artworks, and design drawings are specifically copywrite protected.

Also included under Trademark protection are the following:

MINI-STEP QUAD-STEP AUTO-PARK DIAL-POT MMA PRINTER PORT DRIVER

THE MOTION GROUP information is transferred to the customer for their own uses upon the purchase of a TECHNOLOGY TRANSFER AGREEMENT and is limited to those items listed in the agreement. Contact the Customer Service Center for TTA details.

All equipment purchased from THE MOTION GROUP includes a 100 % warranty for parts and labor. This warranty may be revoked at any time and the purchase refunded at the discretion of THE MOTION GROUP.